

## Wall mount bracket G-Cam/EBDA-002 (5.04741)




### Installation with e.g. Mini fisheye IP camera

Follow the steps to install the mini fisheye IP camera on the mini dome mount kit.

#### Step 1:

Run the Ethernet cable through the pendant mount. If there are other cables, such as power cable, alarm I/O cable or audio I/O cable, please also insert them through the pendant.

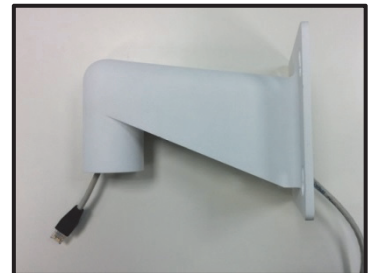

#### Step 2:

Please place the supplied silicone rubber ring around the thread.



**Step 3:**

Thread the Ethernet cable and other cables through the mount kit (as shown in the figure). Then, fasten the mount kit to the pendant mount.




**Step 4:**

Connect the Ethernet cable to the camera, and then hide the cable inside the mount kit.



**Step 5:**

Install the camera on the mount kit by tightening the supplied M3 x 23 mm machine screws at two sides of the camera.

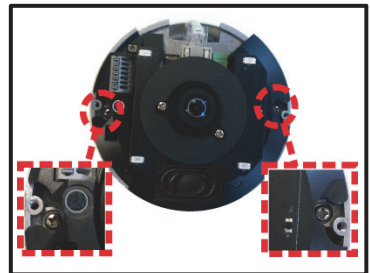

**Step 6:**

Put the dome cover back, and tighten the screws at two sides.



Installation completed.



Technical alterations reserved.

**GEUTEBRÜCK GmbH**

Im Nassen 7-9 | D-53578 Windhagen | Tel. +49 (0)2645 137-0 | Fax-999 E-mail: [info@geutebrueck.com](mailto:info@geutebrueck.com) | Web: [www.geutebrueck.com](http://www.geutebrueck.com)